

FLASH

BARTM



ClorDiSys

Flashbar™

The Flashbar system of UV-C disinfection devices are wall or ceiling mounted units that come in a variety of size options.

Flashbar- Recessed fit within an existing lighting unit and are idea for drop ceilings. Units can come with 1, 2, or 4 UV-C bulbs.

Electronic Ballasts

State-of-the-art electronic ballasts are specifically designed to operate ultraviolet lamps. They offer these advantages over conventional ballasts:


- deliver higher UV-C lamp output
- instant starting
- small and lightweight
- operate cooler for longer life
- versatile—each operates a wide range of lamps
- save energy through higher efficiency
- provide silent operation

Lampholders

Set includes a stationary and a spring-loaded, telescopic holder that holds a single pin lamp securely. The spring-loaded feature on one end facilitates convenient, quick and easy lamp changes.

Stainless Steel Construction

The unit is manufactured in Type 304 stainless steel for unparalleled strength, durability and an attractive finish.

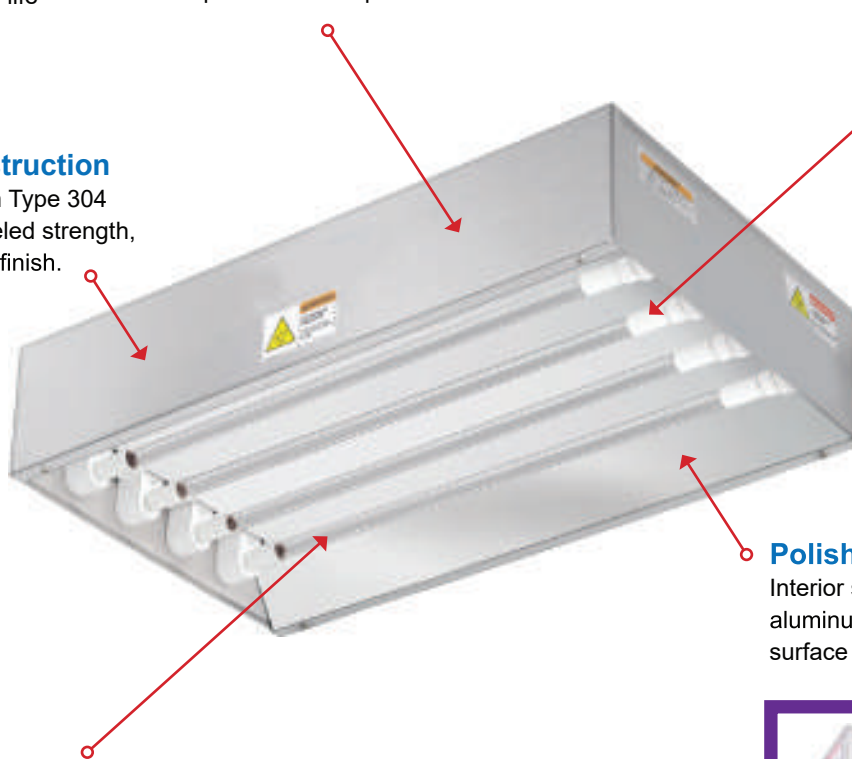

Polished Reflector

Interior surface is polished specular aluminum providing a highly reflective surface to maximize ultraviolet intensity.

UV-C Lamps

Lamp is instant starting and provides high quality and sustained output and longevity.



Wire Form Lamp Guard (optional)

Wire form lamp guard helps protect lamp(s) from accidental breakage.

Flashbar™

The Flashbar™ system of UV-C disinfection devices are wall or ceiling mounted units that come in a variety of size options.

Flashbar™ fit within an existing lighting unit and are idea for drop ceilings. Units can come with 1, 2, or 4 UV-C bulbs.

Electronic Ballast

State-of-the-art electronic ballasts are designed specifically to operate ultraviolet lamps. Electronic Ballasts offer these advantages over conventional ballasts:


- deliver high uv lamp output
- lightweight
- operate cool for longer life
- versatile—each operates a wide range of lamps
- save energy through high efficiency
- provide silent operation

Lampholder

Set includes a stationary and a spring-loaded, telescopic holder that holds a single pin lamp securely. The spring-loaded feature on one end facilitates convenient, quick and easy lamp changes.

Stainless Steel Construction

The fixture is manufactured in Type 304 stainless steel for unparalleled strength, durability and an attractive finish.

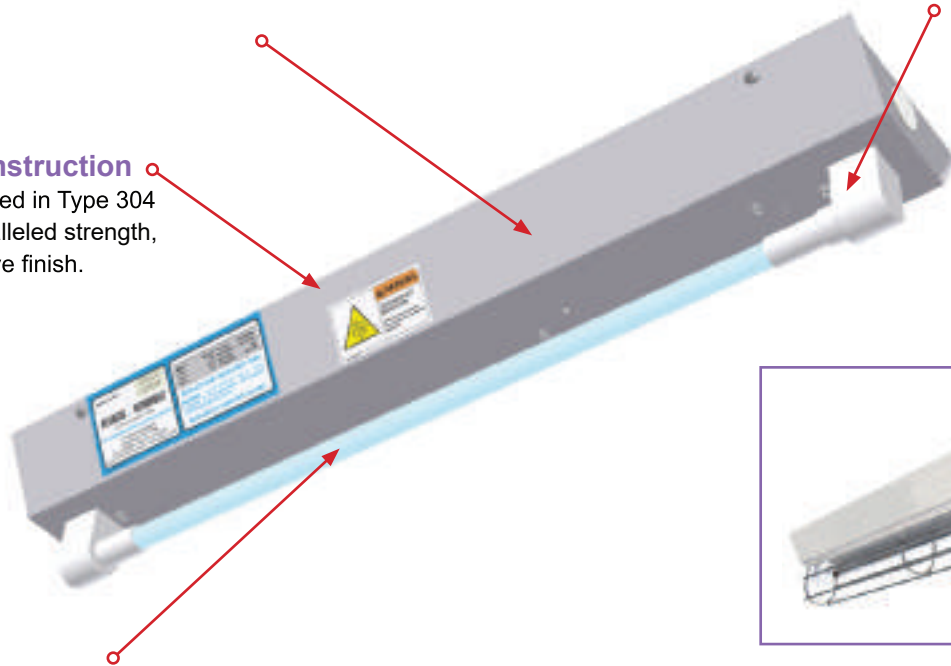

Instant Start UV-C Lamp

Lamps are instant starting and provide the utmost in quality, sustained output, and longevity.(See page 11 for information.)

Wire Form Lamp Guard (optional)

Wire form lamp guard helps protect lamp(s) from accidental breakage. Must be ordered at same time as fixture.

FLASHBAR™
ClorDiSys www.clordisys.com
908-236-4100



APPLICATIONS

-Complete room transformation into a cleanroom

-Fit specific sized unit into pre-existing piece of cabinetry or chamber to create custom disinfection unit

-Recess Flashbar™ units to replace pre-existing ceiling tiles

-Position Flashbar™ units on walls

-Utilize multiple units to expose uniquely sized or shaped areas with UV-C

-Have permanently positioned UV-C units within a facility to utilize during downtime or at night

-Mold remediation

-Ambulances or transport vehicles

-Other surface disinfection

www.clordisys.com